Razer Tarantula V2.02 Firmware Update Procedure

Solution **Product Name: Razer Tarantula**

1. Unzip the files

2. Plug in the keyboard

3. Double-click the Firmware Updater application

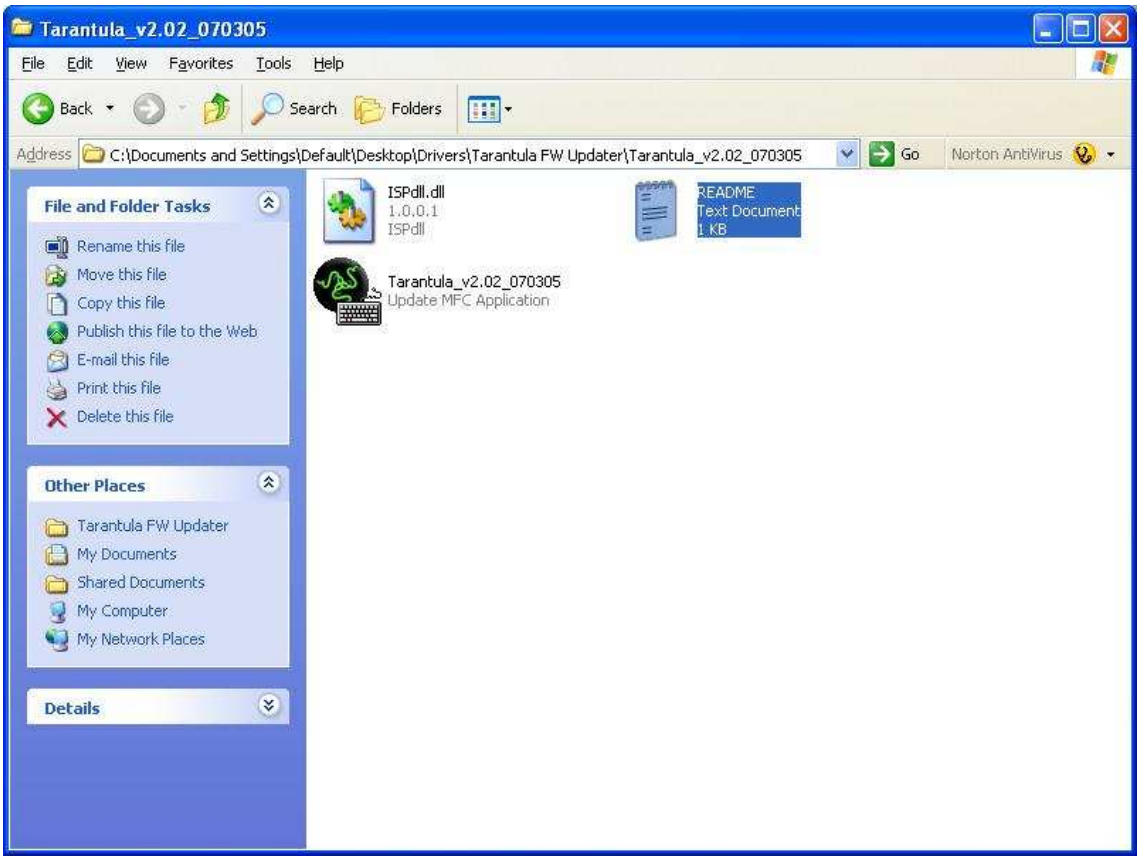

4. If prompted to unplug the keyboard,go to step 5, else go to step 6.

5. Make sure you unplug the keyboard cable (the thicker cable) and that you hear the USB unplug sound.
--> When you plug the keyboard back into the **same USB port**, hold the requested button until you hear the
USB plug-in sound and the LEDs stop glowing.
Note: The requested button varies depending on version of previous firmware

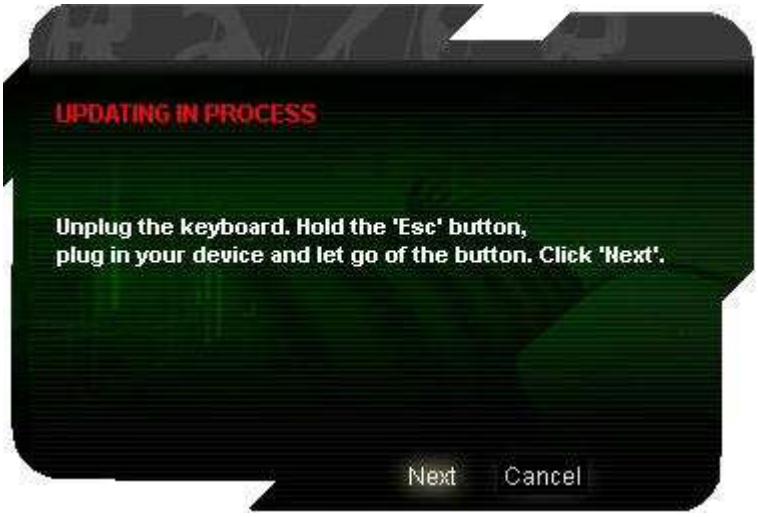
UPDATING IN PROCESS
Unplug the keyboard. Hold the 'Esc' button,
plug in your device and let go of the button. Click 'Next'.
Next
Cancel

OR

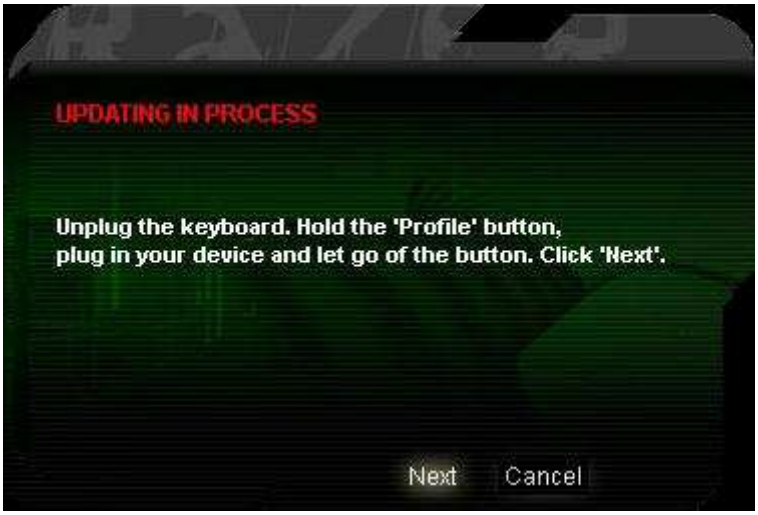
UPDATING IN PROCESS
Unplug the keyboard. Hold the 'Profile' button,
plug in your device and let go of the button. Click 'Next'.
Next
Cancel

6. If 'Found New Hardware Wizard' pops up, proceed to step to 7, else go to step 8.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

7.

Found New Hardware Wizard
Welcome to the Found New Hardware Wizard
Windows will search for current and updated software by looking on your computer, on the hardware installation CD, or on the Windows Update Web site (with your permission).
Read our privacy policy
Can Windows connect to Windows Update to search for software?
Yes, this time only
Yes, now and every time I connect a device
No, not this time
Click Next to continue.
< Back
Next >
Cancel

Click on **Next.**

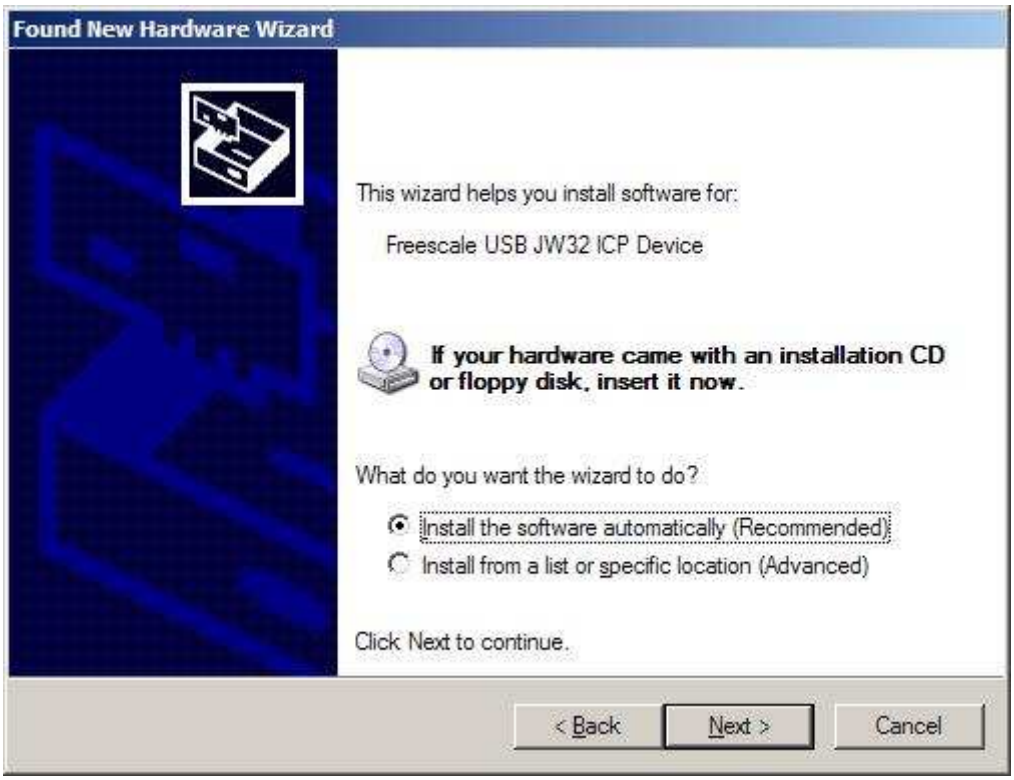
Found New Hardware Wizard
This wizard helps you install software for:
Freescale USB JW32 ICP Device
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

Click on **Next.**

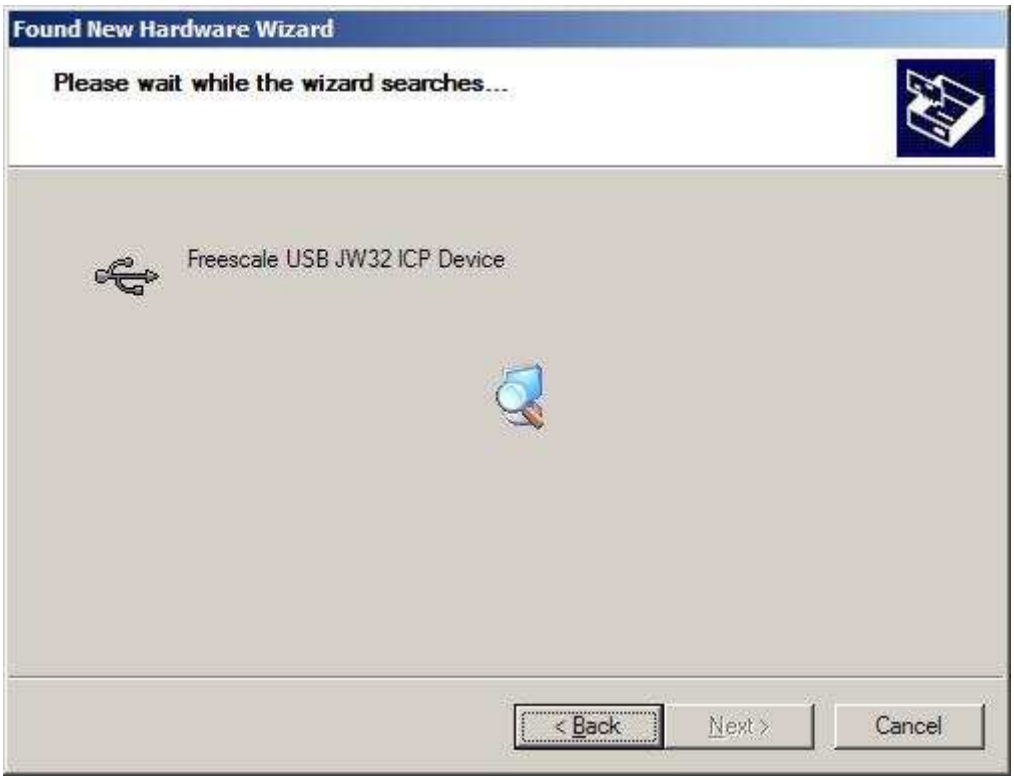

Hardware Installation
The software you are installing for this hardware:
Freescale USB JW32 ICP Device
has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.)
Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
Continue Anyway
STOP Installation

Click on **Continue Anyway** to install the Freescale Driver.

Found New Hardware Wizard
Completing the Found New Hardware Wizard
The wizard has finished installing the software for:
Freescale USB JW32 ICP Device
Click Finish to close the wizard.
< Back
Finish
Cancel

Click '**Finish**' to complete the installation of the Freescale Driver.

8. Click 'Next' on the FW updater window

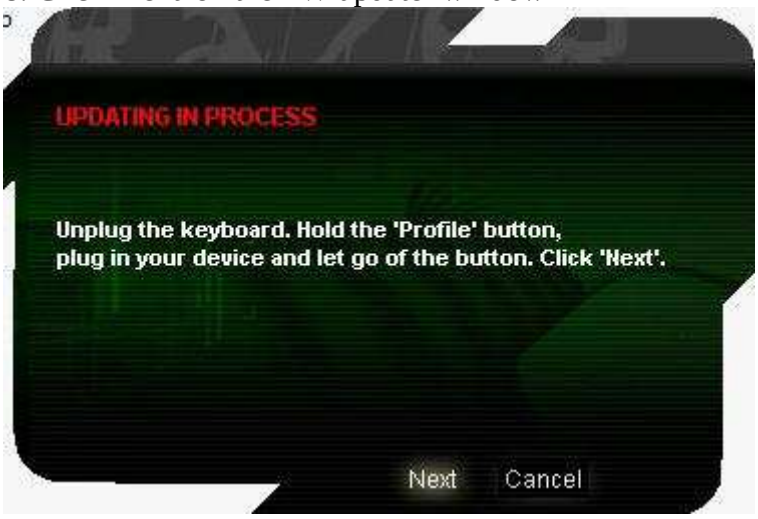
UPDATING IN PROCESS
Unplug the keyboard. Hold the 'Profile' button,
plug in your device and let go of the button. Click 'Next'.
Next
Cancel

9. The new firmware will load into the keyboard.

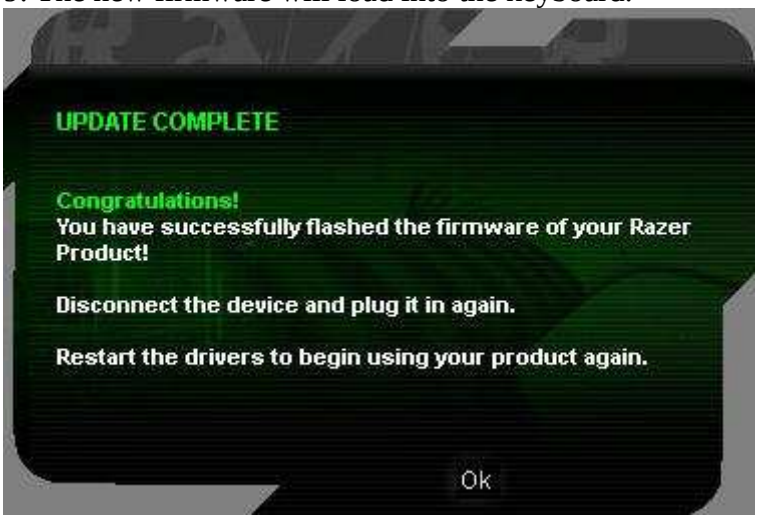
UPDATE COMPLETE
Congratulations!
You have successfully flashed the firmware of your Razer Product!
Disconnect the device and plug it in again.
Restart the drivers to begin using your product again.
Ok

10. Unplug the keyboard.

11. Re-plug the keyboard (Tarantula LED should start glowing) into the same USB port.

12. Restart your PC.

Razer
TARANTULA
Driver Control
Imaging Options
Windows Picture Viewer
Media Player Options
Windows Media Player
macro Keys
L1 PL1| PL1^
L2 PL2| PL2^
L3 PL3| PL3^
L4 PL4| PL4^
L5 PL5| PL5^
macro Keys
PR1| PR1^ r1
PR2| PR2^ r2
PR3| PR3^ r3
PR4| PR4^ r4
PR5| PR5^ r5
Auto Switching Overide
Prevent profile switching
Application Key Options
Launch Razer Tarantula Driver
Driver Version
V2.10 b
Firmware Version
V2.02
Show changes on screen
Enable visual change
Synapse Profile Selection
Profile 1
Keymap A
Keymap Selector
Keymap b
Ok
Cancel
Apply